

Personal Organizer

Organizador Personal

User's Guide

Manual del usuario

Table of Contents

License Agreement	2	
Introduction	3	
Notice	4	
Getting Started	5	
Key Guide	8	
Using the Clocks	12	
Setting the Alarms	15	E
Using the Telephone Directory	17	N
Using the Scheduler	20	G
Using the Memo Directory	22	
Searching for and Editing Records	23	
Using a Password	25	
Using the Calculator	28	
Using the Converter	30	
Replacing the Battery	33	
Specifications	34	
Limited Warranty (outside U.S.)	34	
Limited Warranty (U.S. only)	35	
FCC Notice	36	

License Agreement

READ THIS LICENSE AGREEMENT BEFORE USING THE ELECTRONIC REFERENCE. YOUR USE OF THE ELECTRONIC REFERENCE DEEMS THAT YOU ACCEPT THE TERMS OF THIS LICENSE. IF YOU DO NOT AGREE WITH THESE TERMS, YOU MAY RETURN THIS PACKAGE WITH PURCHASE RECEIPT TO THE DEALER FROM WHICH YOU PURCHASED THE ELECTRONIC REFERENCE AND YOUR PURCHASE PRICE WILL BE REFUNDED. ELECTRONIC REFERENCE means the software product and documentation found in this package and FRANKLIN means Franklin Electronic Publishers, Inc.

Limited Use License

All rights in the ELECTRONIC REFERENCE remain the property of FRANKLIN. Through your purchase, FRANKLIN grants you a personal and nonexclusive licensed to use this ELECTRONIC REFERENCE. You may not make any copies of the ELECTRONIC REFERENCE or of the data stored therein, whether in electronic or print format. Such copying would be in violation of applicable copyright laws. Further, you may not modify, adapt, disassemble, decompile, translate, create derivative works of, or in any way reverse engineer the ELECTRONIC REFERENCE. You may not export or reexport, directly or indirectly, the ELECTRONIC REFERENCE without compliance with appropriate governmental regulations. The ELECTRONIC REFERENCE contains Franklin's confidential and proprietary information which you agree to take adequate steps to protect from unauthorized disclosure or use. This license is effective until terminated. This license terminates immediately without notice from FRANKLIN if you fail to comply with any provision of this license.

Introduction

Congratulations! You now own a Rolodex® Electronics Personal Organizer that holds up to 128k of memory. Using this organizer you can:

- keep track of daily appointments;
- store and retrieve:
 - business and personal telephone numbers and addresses
 - e-mail addresses
 - memos
 - schedules;
- set two clocks to keep time and date in 29 locations around the world;
- set a Daily Alarm;
- perform metric and currency conversions;
- sync data with your PC;
- choose between 6 prompt languages;
- protect your data with a password.

You can also use the backlight for easier viewing.

Notice

- The manufacturer strongly recommends that separate permanent written records be kept of all important data. Data may be lost or altered in virtually any electronic memory product under certain circumstances. Therefore, the manufacturer assumes no responsibility for data lost or otherwise rendered unusable whether as a result of improper use, repairs, defects, battery replacement, use after the specified battery life has expired, or any other cause.
- The manufacturer assumes no responsibility, directly or indirectly, for financial losses or claims from third parties resulting from the use of this product and any of its functions, such as stolen credit card numbers, the loss or alteration of stored data, etc.
- The information provided in this manual is subject to change without notice.

Cautions

- Do not carry the organizer in the back pocket of your slacks or trousers.
- Do not drop the organizer or apply excessive force to it.
- Do not subject the organizer to extreme temperatures.
- Clean only with a soft, dry cloth.
- Since this product is not waterproof, do not use it or store it where fluids can splash onto it. Raindrops, water spray, juice, coffee, steam, perspiration, etc. will also cause the organizer to malfunction.

Getting Started

Using the Organizer for the First Time

The first time you use this organizer, you should perform a system reset. **Warning!** A system reset erases any user-entered information and clears all settings. Pressing the reset button with more than light pressure may permanently disable your organizer.

1. Turn the organizer over and carefully pull the battery insulation sheets to remove them.
2. Press ON/OFF to turn the organizer off.
3. Use a thin, pointed object (e.g., a straightened paper clip) to press the reset button on the back of the organizer.

Caution: Do not use an object with a breakable or sharp tip.

RESET?

4. Press ENTER to clear the memory.

To cancel, press any other key.

RESET TIME?

5. Press ENTER to reset the time.

To cancel, press any other key.

ENGLISH?

6. Press Search or to cycle through US English, Spanish, French, German, Portuguese, and Italian.

7. When the language you want is displayed on the screen, press ENTER to select it.

The unit automatically returns to the Home Time mode.

◆ Setting the Clock

To learn how to set the clock, see "Using the Clocks".

Changing the Language

This organizer can display prompts and other messages in six languages. To select a language, do the following:

1. Press (Time).

<<HOME TIME>>
FRI 1-JAN-1999
HONG KONG
12:35 40PM ☀

2. Press L(Lang).

ENGLISH?

E
N
G

3. Press Search or to cycle through US English, Spanish, French, German, Portuguese, and Italian.

4. When the language you want is displayed on the screen, press ENTER to select it.

The unit automatically returns to the Home Time mode.

◆ Auto Shut-Off

When none of the keys have been pressed for approximately 5-6 minutes, the organizer automatically turns the power off to save the batteries. Press **ON/OFF** to resume. The actual life of the batteries depends on the usage.

Key Guide

Function Keys



Goes to the Business telephone directories.



Goes to the Personal telephone directory.



Goes to the Scheduler.



Goes to the Memos.



Toggles between Home time and World time.



Goes to the Alarm.



Goes to the Metric Converter.



Goes to the Currency Converter.



Goes to the Calculator.




Goes to Data synchronization.



Turns the backlight on or off.

Other Keys

 (C/CE) Moves the cursor to the next line in a record in editing mode.

ON/OFF Turns the organizer on and off.







ENTER Stores data in a record, confirms data entries.

DEL Deletes a character when editing a record.

Deletes a record being viewed.

INS Allows characters to be inserted when editing a record.

Key Guide

- SET/EDIT** Allows you to edit information. Sets the Home and World Times, Daily Alarm, and conversion rates.
- SYM** Types special symbols, e.g. @, #, etc.
- SPACE** Types a space in records, accesses the password in Home Time.
- Search**  Cycles through records, world times, conversions.
-  Moves cursor in indicated direction.
-  (Contr) Controls the screen contrast.
-  (Next) Displays next record.
- C**  Selects the alarm clock and then cycles through the Daily, Hourly, and Schedule alarms to activate/deactivate them.
- D(DST)** When the Home Time is displayed, turns daylight savings on or off.
- L(Lang)** Changes the prompt language.
- X(AM/PM)** Toggles times between a.m. and p.m.
- M(MD/DM)** Toggles date display between M/D/Y and D/M/Y.
- Z(12/24)** Toggles times between 12- and 24-hour time displays.
- V**  Turns the keytone on or off.

Calculator Function Keys

You **do not** need to use **ALT** when using these keys in the calculator.

Q(MC)	Clears the memory.
W(MR)	Retrieves a number from the memory.
E(M-)	Subtracts the displayed number from the number stored in the memory.
R(M+)	Stores a positive number in the memory.
+	Adds a number.
-	Subtracts a number.
x	Multiplies a number.
÷	Divides a number. Displays as / .
•	Inserts a decimal point.
=	Performs a calculation.
O(%)	Calculates a percentage.
P(+/-)	Changes the sign (+/-) of a number.
←(C/Ce)	Clears the most recent entry.

◆ Turning the Keytone Off or On

The keytone is the beep that sounds whenever a key is pressed. When the keytone is on, an icon (🔔) appears on the screen. To turn the keytone on or off, press 🌐⌚(Time) to return to Home Time, and then press V(🔔).

◆ About the Backlight

You can press 💡 to switch the backlight on and off. It will automatically turn off if you have not pressed a key for about eight seconds.

◆ About Symbols

SYM gives you the option of entering any of 23 symbols. Press **SYM**. Press Search🔍 or 🕒 to cycle through the symbols: + - = % • @ / : _ , # \$ £ ¥ ? * () ! & \ ➡ ⬅ . Press 0-9 to confirm the symbol you want.

◆ About Screen Illustrations

Some screen illustrations in this User's Guide may vary slightly from what you see on the screen. This does not mean that your organizer is malfunctioning.






Using the Clocks

The clock lets you set a Home Time and view local times around the world. You should set the Home Time before viewing world times or using the Schedule, To Do and Anniversary directories, because world times are based on the Home Time.

Setting Home Time

1. Press  (Time) until the Home Time screen appears.

<<HOME TIME>>
FRI 1-JAN-1999
HONG KONG
12:35 40PM 

2. Press M(MD/DM) to toggle between the date display of M/D/Y and D/M/Y.
3. Press D(DST) if you want to see daylight savings time.
 is displayed. To turn it off, press D(DST) again.
4. Press SET/EDIT to start editing.
5. Press Search  or  to cycle through the list of 29 cities.
6. When you see the one you want, stop pressing Search  or  to choose it as your home city.


Note: If you wish to change the label of your Home city, type the name you want using up to 12 letters.

7. Press **ENTER** and enter the date and Home Time. For example, to enter 11-25-1999, 10:30 a.m., type **112519991030**.

<<HOME TIME>>
THU 25-NOV-1999
NEW YORK
10:30 40AM -

8. Press **ENTER** to store your settings.

Setting World Time

1. Press  (Time) until the World Time screen appears.

<<WORLD TIME>>
FRI 1-JAN-1999
LONDON +05 : 00
4:35 40AM -

E
N
G


There are 29 built-in cities in different time zones.

2. Use **Search**  or  to cycle through the list of cities and view their corresponding times.

Note: The World Time is based upon hours added to or subtracted from the Home Time zone. It is not a separate clock and cannot be set.

Using the Clocks

City Code	City Name	City Code	City Name
AUCKLAND	Auckland	CAIRO	Cairo
GUAM	Guam	PARIS	Paris
SYDNEY	Sydney	LONDON	London
ADELAIDE	Adelaide	AZORES	Azores
TOKYO	Tokyo	MID ATLANTIC	Mid Atlantic
HONG KONG	Hong Kong	RIO.	Rio De Janeiro
BANGKOK	Bangkok	CARACAS	Caracas
YANGON	Yangon	NEW YORK	New York
DHAKA	Dhaka	CHICAGO	Chicago
DELHI	Delhi	DENVER	Denver
KARACHI	Karachi	LOS ANGELES	Los Angeles
KABUL	Kabul	ANCHORAGE	Anchorage
DUBAI	Dubai	HAWAII	Hawaii
TEHRAN	Tehran	MIDWAY	Midway
MOSCOW	Moscow		




3. Press **SET/EDIT** to edit a city name of your choice (up to 12 characters) and press **ENTER** to confirm your choice.
4. Press  (Time) to return to the Home Time screen.

◆ Time Format

When setting time, press **X** (AM/PM) to toggle between a.m. and p.m.

When viewing time, press **Z** (12/24) to toggle between the 12-hour and 24-hour format.

Setting the Alarms

There are three kinds of alarms: the Daily Alarm, indicated by , the Hourly Chime, indicated by , and the Schedule Alarm, indicated by .

Setting the Daily Alarm

1. Press  (Alarm).

ALARM


12:00 AM

2. Press SET/EDIT, then use the numbered keys to enter a time. For example, enter 1015, and press X(AM/PM) to select either a.m. or p.m.
3. Press ENTER to confirm your settings.

ALARM



10:15 AM

 indicates that the Daily Alarm is on.

 
At the set time, your organizer will automatically turn on (if it was off). The alarm will sound for about 20 seconds. Press any key to turn off the alarm.


Setting the Hourly Chime/Schedule Alarm

 
The Hourly Chime sounds once every hour on the hour.


 


The Schedule Alarm sounds at the selected day and time.

1. Press  (Time) until Home Time is displayed.
2. Press **C** () until  is displayed.



3. To cancel the alarm, press **C** () until no icon is displayed.


Press **C** () to cycle through four alarm selections:


Alarm	Icon
No alarm	No icon
Hourly Chime	
Schedule Alarm	()
Hourly Chime and Schedule Alarm	 ()

Using the Telephone Directory

Entering a Phone Record

There are three phone directories: Business 1, Business 2 and Personal.

1. Press  (Bus) to cycle between the two Business phone directories.

Press  (Pers) to go to the Personal phone directory.



E
N
G

<<BUSINESS-1>>
NAME?

2. Type a name. For example, to enter the name Robert Edwards, type EDWARDS ROBERT.

Note: To alphabetize your entries by the last name, you must type the last name first.

You can enter a maximum of 45 characters in the name field, including letters, numbers and symbols.

To enter a symbol, press **SYM**. Press **Search**  or  to cycle through the list of symbols and press 0-9 to choose the symbol you want.

Using the Telephone Directory

NAME?

■ EDWARDS_

Note: If the data on the first line exceeds 18 characters, it will automatically wrap to the next line.

3. Press **ENTER** to confirm the entry in the Name field.

COMPANY?

■

—

4. Type the name of a company.

In the Company field, you can enter a maximum of 18 characters including letters, numbers and symbols.

5. Press **ENTER** to confirm the entry and go to the next field.
6. Type a phone number. For example, type 201-265-5600.

Using the Telephone Directory

HOME?

h: 201-265-5600

In each number field, you can enter a maximum of 18 digits, including hyphens and spaces.

7. Press **ENTER** to go to the next field.

You can now enter a Work number, Fax number, Cell phone number, Pager number (each up to 18 characters), E-mail address (up to 45 characters), Street address (up to 81 characters) and NOTE (up to 63 characters).

It is not necessary to complete each field. Skip an unwanted field and move on to the next one by pressing **ENTER**.

NOTE?

■ **VISIT ABC COMPANY**

This is the last field.

8. Press **ENTER** to store the record.

To learn how to view and edit records, please refer to "Searching for and Editing Records".

Using the Scheduler

In each schedule record, you can enter the date, time, and keywords for the event.

Entering a Schedule Record

1. Press  (Sched).

<<SCHEDULE>>
DATE/TIME?

2. To type the date and time, press any number key to start the input mode and then type your information. For example, to enter 20-09-1999, 11:30, type 200919991130.

Press **X** to choose a.m. or p.m., if needed.

The date format follows the one chosen on the Home Time screen. See "Setting Home Time".

3. Press **ENTER** to type keywords for the event. For example, type **STAFF MEETING**.

You can enter a maximum of 108 characters, including letters, numbers and symbols.

20-9-1999
11:30 AM
STAFF MEETING

Using the Scheduler

Note: If your data on the first line exceeds 18 characters, it automatically wraps to the next line.

Schedule records are sorted chronologically by the Date/Time entries.

4. Press **ENTER** to store the data.

(())

-SCHEDULE-

DATE/TIME?

E
N
G

5. To turn on the Schedule alarm, press **C** (()) in the Home Time display mode.

To learn how to set the Schedule alarm, please refer to "Setting the alarms".

When the Schedule alarm is set, the alarm will sound at the time of the appointment. The organizer will turn on (if it was off), displaying the relevant schedule record. Note: if you have set a password, you must enter it to view the schedule entry. See "Using a Password" for more information.

To turn the alarm off, press **C**(()) in Home Time display mode until (()) disappears.

To learn how to view and edit records, please refer to "Searching for and Editing Records".

Using the Memo Directory

You can enter a maximum of 108 characters including letters, numbers and symbols in each memo record.

Entering a Memo Record

1. Press  (Memo).

<<MEMO>>
MEMO?

2. Type your data.

Press **SPACE** to insert spaces in your data.

3. Press  (C/CE) to move the cursor to the next line.



 



4. Press **ENTER** to store your data.

To learn how to view and edit records, please refer to "Searching for and Editing Records".




Searching for and Editing Records




You can search for your records either directly or sequentially. You can review your records, edit them or delete them.

Searching for a Record



1. Press  (Bus),  (Per),  (Sched), or  (Memo).
2. Press Search  or  to view records in order.

Records in the phone directories are in alphabetical order; records in the Schedule directory are in chronological order and Memo entries are in the order in which you entered them.

In any phone directory you can type the first few letters of a name in the name field of a record and then press Search  to find it. The organizer will display the first record starting with those letters (if any). You can then use  or  to scroll through the record.

In the Schedule directory, you can type a date in the Date field of a record and press Search  to find it. You can then use  or  to scroll through the record.

Viewing a Record

1. Find the record you want to view.
See "Searching for a Record", above.
2. Press  or  to view the full record.

Continue to press Search  or  to view more records.

Editing a Record

1. Find the record you want to edit.
To learn how, read "Searching for a Record".
2. Press **SET/EDIT**.
3. Move the cursor to the character you want to edit.
4. Press **INS** to insert a character.
Press **DEL** to delete a character.
5. Press **ENTER** to store your changes.

Deleting a Record

1. Find the record you want to delete.
To learn how, read "Searching for a Record".
2. Press **DEL**.
3. Press **ENTER** to delete the record.
To exit without deleting, press any key other than **ENTER**.



▼ ■■■WAIT■■■

After a moment, you will see the message "DELETED!" and you will return to the initial screen of the directory you are in.



Using a Password

You can lock your organizer so that only the Clock, Calendar, Calculator and Converter can be used without supplying the password. Note: You do not need to set a password to use this organizer.

Warning: Please keep written records of your data. If you forget your password, you will not be able to recover any of the data stored in your organizer. To use the organizer again, you will have to perform a system reset, which will clear the password and erase all the data stored in memory. To learn how to perform a system reset, read "Getting Started".


E
N
G





Setting the Password

1. Press  (Time) until Home Time is displayed.
2. Press SPACE .





Type a password. You can use up to 6 digits.
Remember to write your password down and keep it in a safe place.

 
3. Press ENTER to store your password.

The  icon will be displayed.

The next time you turn the unit on and press  (Bus),  (Per),  (Sched), or  (Memo), you will need to enter your password to use these functions.


Accessing Data When the Password is Activated

1. After turning the unit on when the password is activated, press  (Bus),  (Per),  (Sched), or  (Memo).





You are prompted to enter your password. Type your password and then press **ENTER**.

 
If you mistype your password, the message "OPEN ERROR!" will appear and you will be prompted to enter your password again.

After you enter your correct password, the  icon will disappear from the screen and you will be able to enter your data.

2. You can now enter new data or view existing data.

Changing or Deactivating the Password

1. Press  (Time) until Home Time is displayed.
2. Press SPACE().



3. Type your old password and then press ENTER.

You will be prompted to enter your new password.

To deactivate your password, just press ENTER without pressing any number keys first.

 
4. Type your new password and then press ENTER.

This unit may change operating modes due to Electro-static Discharge. Normal operation of this unit can be re-established by pressing the reset key, ON/OFF or by removing/replacing batteries.

Using the Calculator

Making a Calculation

1. Press  (Calc) .



2. Type a number.

You can type up to 12 digits. To type a decimal, press **.**

 
To change a number from positive to negative, press **P (+/-)**.

To clear a number, press **← (C/Ce)**.

3. Press **+**, **-**, **x** or **÷** to add, subtract, multiply, or divide, respectively.
4. Type another number.
5. Press **=** to calculate.
- Or press **O (%)** to calculate the percentage.
6. Press **← (C/Ce)** to clear the calculations.

Using the Calculator Memory

1. In the Calculator, make a calculation or type a number.
2. To add the number on the screen to the number stored in memory, press **R(m+)**. To subtract the number on the screen from the number stored in memory, press **E(m-)**.



M indicates the number is stored in memory.

3. To retrieve the number from memory, press **W(MR)**.
4. To clear the memory, press **Q(mc)**.

Note: When the integer part of a calculation result, or any integer in the memory, exceeds 12 digits (including the decimal point), or any other invalid operation is attempted, a calculator error will occur and "E" will appear on the display. Press **← (C/Ce)** to clear the error.

Using the Converter

Using the Built-in Conversion Rates

Use your organizer to do the following built-in conversions:

Feet	⇔	Meter
Yard	⇔	Meter
Inch	⇔	Centimeter
Mile	⇔	Kilometer
Pound	⇔	Kilogram
US gallon	⇔	Liter
UK gallon	⇔	Liter
Ounce	⇔	Gram
Fahrenheit	⇔	Centigrade

1. Press (Metric).

<<METRIC>>	
FEET → M	0.3048
FEET	0.
M:	0.
	0.

2. Press Search or to select a conversion category, if needed.

3. Press or to select the conversion direction, if needed.

4. Type the number to be converted. For example to convert 10 ft. to meters, type 10.

<<METRIC>>	
FEET → M	0.3048
FEET	10.
M:	3.048
	10.

5. Press  or  to convert it in either direction.





<<METRIC>>		
FEET	← M	3.28083989501
FEET		32.8083989501
M:		10.
		10.

Converting Currency

There are 15 built-in currency exchange rates, 3 of which you can program.

1. Press  (Currency).

EURO	0.00
FR F	0.00
US D	0.00
CUR 1	0.00
CUR 2	0.00
EURO	0.

2. Press Search  or  to select one of the built-in currency exchanges.
3. Type the number for conversion on the bottom row and press ENTER to convert.
4. Press Search  or  to view the other currencies.
- Note: The bottom row remains unchanged.
5. Type a new number to start the next conversion.

Setting a Currency Rate

1. Press $\text{(\$)}(\text{Currency})$.
2. Press SET/EDIT.

EURO	1.
FR F	6.55957
US D	1.
CUR 1	1.
CUR 2	1.
US D(SET)	1.

<SET> will be displayed on the bottom row of the screen to indicate that the unit is now ready for a rate to be set.

Note: All rates must be in relation to the EURO. For e.g. if 1 Euro = 1.0662 US\$, enter 1.0662 as the conversion rate for USD.

3. Press \blacktriangle or \blacktriangledown to cycle through the 3 programmable currencies.

Note: The default names are USD, CUR1 and CUR2. The default conversion rate is 1.

4. Type the new currency name (up to 4 letters or numbers) and press ENTER.
5. Type the new conversion rate.
You can type up to 6 digits.
6. Press ENTER to save the rate.

Replacing the Battery

This organizer uses two CR2032, 3-volt lithium batteries. Before you follow these steps you should have a small Phillips screwdriver (one that fits into screws with an "X" notch) and the new batteries at hand.

Warning! When no batteries are installed, this organizer will save your information for only about 30 seconds. So quickly install the new batteries when you remove the old ones.

1. Turn off the organizer and turn it over.
2. With a Phillips screwdriver, remove the screw to the battery cover and then remove the lid.
3. Remove the old batteries and quickly replace them with the new batteries, with the positive (+) sides facing up.
4. Replace the battery cover.

Warning! If *RESET?* appears when you next turn on the organizer, do not press ENTER unless you want to reset the organizer and erase all your information.

♦ Keep Written Copies of Important Data

This organizer stores your information as long as the batteries supply power.

Warning! If the batteries lose power or are removed, all your information will be lost. Information can also be lost or corrupted if you make a mistake while operating this organizer. Therefore, always keep written copies of your important information in case it is corrupted or lost.

Specifications

Model: RF-128b *Personal Organizer*

Size: 14.3 x 9.6 cm • Weight: 4.5 oz.

Battery: Two CR2032 lithium • Storage capacity: 128 K

Contacts

For registration and sales call 1-800-266-5626 (U.S. only) or visit us at www.franklin.com. Please have your product number (**RF-128b**) and date of purchase handy when you call to register. For customer service call 609-239-4333. For technical support call 609-386-8997.

Cleaning This Product

To clean this product, spray a mild glass cleaner onto a cloth and wipe its surface. Don't spray liquids directly onto the unit. Don't use or store your organizer in extreme or prolonged heat, cold, humidity, or other adverse conditions.

Copyrights, Trademarks and Patents

© 2000 Franklin Electronic Publishers, Inc.

Burlington, N.J. 08016-4907 USA. All rights reserved.

ROLODEX® is a registered trademark of Berol Corporation, a subsidiary of Newell Rubbermaid Inc. Patents Pending

ISBN 1-56712-529-8

Limited Warranty (outside U.S.)

This product, excluding batteries is guaranteed by Franklin for a period of one year from the date of purchase. It will be repaired or replaced with an equivalent product (at Franklin's option) free of charge for any defect due to faulty workmanship or materials.

Products purchased outside the United States that are returned under warranty should be returned to the original vendor with proof of purchase and description of fault. Charges will be made for all repairs unless valid proof of purchase is provided.

This warranty explicitly excludes defects due to misuse, accidental damage, or wear and tear. This guarantee does not affect the consumer's statutory rights.

Limited Warranty (U.S. only)

LIMITED WARRANTY, DISCLAIMER OF WARRANTIES AND LIMITED REMEDY

(A) LIMITED WARRANTY. FRANKLIN WARRANTS TO THE ORIGINAL END USER THAT FOR A PERIOD OF ONE (1) YEAR FROM THE ORIGINAL DATE OF PURCHASE AS EVIDENCED BY A COPY OF YOUR RECEIPT, YOUR FRANKLIN PRODUCT SHALL BE FREE FROM DEFECTS IN MATERIALS AND WORKMANSHIP. THIS LIMITED WARRANTY DOES NOT INCLUDE DAMAGE DUE TO ACTS OF GOD, ACCIDENT, MISUSE, ABUSE, NEGLIGENCE, MODIFICATION, UNSUITABLE ENVIRONMENT OR IMPROPER MAINTENANCE. THE SOLE OBLIGATION AND LIABILITY OF FRANKLIN, AND YOUR EXCLUSIVE REMEDY UNDER THIS LIMITED WARRANTY, WILL BE REPAIR OR REPLACEMENT WITH THE SAME OR AN EQUIVALENT PRODUCT OF THE DEFECTIVE PORTION OF THE PRODUCT, AT THE SOLE OPTION OF FRANKLIN IF IT DETERMINES THAT THE PRODUCT WAS DEFECTIVE AND THE DEFECTS AROSE WITHIN THE DURATION OF THE LIMITED WARRANTY. THIS REMEDY IS YOUR EXCLUSIVE REMEDY FOR BREACH OF THIS WARRANTY. THIS WARRANTY GIVES YOU CERTAIN RIGHTS; YOU MAY ALSO HAVE OTHER LEGISLATED RIGHTS THAT MAY VARY FROM JURISDICTION TO JURISDICTION.

(B) DISCLAIMER OF WARRANTIES AND LIMITATION OF LIABILITY. EXCEPT FOR THE LIMITED WARRANTIES EXPRESSLY RECITED ABOVE, THIS FRANKLIN IS PROVIDED ON AN "AS IS" BASIS, WITHOUT ANY OTHER WARRANTIES OR CONDITIONS, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, WARRANTIES OF MERCHANTABILITY, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, OR THOSE ARISING BY LAW, STATUTE, USAGE OF TRADE, OR COURSE OF DEALING. THIS WARRANTY APPLIES ONLY TO PRODUCTS MANUFACTURED BY FRANKLIN AND DOES NOT INCLUDE BATTERIES, CORROSION OF BATTERY CONTACTS OR ANY OTHER DAMAGE CAUSED BY BATTERIES. NEITHER FRANKLIN NOR OUR DEALERS OR SUPPLIERS SHALL HAVE ANY LIABILITY TO YOU OR ANY OTHER PERSON OR ENTITY FOR ANY INDIRECT, INCIDENTAL, SPECIAL, OR CONSEQUENTIAL DAMAGES WHATSOEVER, INCLUDING, BUT NOT LIMITED TO, LOSS OF REVENUE OR PROFIT, LOST OR DAMAGED DATA OR OTHER COMMERCIAL OR ECONOMIC LOSS, EVEN IF WE HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES, OR THEY ARE OTHERWISE FORESEEABLE. WE ARE ALSO NOT RESPONSIBLE FOR CLAIMS BY A THIRD PARTY. OUR MAXIMUM AGGREGATE LIABILITY TO YOU, AND THAT OF OUR DEALERS AND SUPPLIERS, SHALL NOT EXCEED THE AMOUNT PAID BY YOU FOR THE FRANKLIN PRODUCT AS EVIDENCED BY YOUR PURCHASE RECEIPT. YOU ACKNOWLEDGE THAT THIS IS A REASONABLE ALLOCATION OF RISK. SOME STATES/COUNTRIES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES, SO THE ABOVE LIMITATION MAY NOT APPLY TO YOU. IF THE LAWS OF THE RELEVANT JURISDICTION DO NOT PERMIT FULL WAIVER OF IMPLIED WARRANTIES, THEN THE DURATION OF IMPLIED WARRANTIES AND CONDITIONS ARE LIMITED TO THE DURATION OF THE EXPRESS WARRANTY GRANTED HEREIN.

(C) WARRANTY SERVICE: UPON DISCOVERING A DEFECT, YOU MUST CALL FRANKLIN'S CUSTOMER SERVICE DESK, 1-800-266-5626, TO REQUEST A RETURN MERCHANDISE AUTHORIZATION ("RMA") NUMBER, BEFORE RETURNING THE PRODUCT (TRANSPORTATION CHARGES PREPAID) TO:

FRANKLIN ELECTRONIC PUBLISHERS, INC.
ATTN: SERVICE DEPARTMENT
ONE FRANKLIN PLAZA
BURLINGTON, NJ 08016-4907

IF YOU RETURN A FRANKLIN PRODUCT, PLEASE INCLUDE A NOTE WITH THE RMA, YOUR NAME, ADDRESS, TELEPHONE NUMBER, A BRIEF DESCRIPTION OF THE DEFECT AND A COPY OF YOUR SALES RECEIPT AS PROOF OF YOUR ORIGINAL DATE OF PURCHASE. YOU MUST ALSO WRITE THE RMA PROMINENTLY ON THE PACKAGE IF YOU RETURN THE PRODUCT, OTHERWISE THERE MAY BE A LENGTHY DELAY IN THE PROCESSING OF YOUR RETURN. WE STRONGLY RECOMMEND USING A TRACKABLE FORM OF DELIVERY TO FRANKLIN FOR YOUR RETURN.

FCC Notice

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: This unit was tested with shielded cables on the peripheral devices. Shielded cables must be used with the unit to insure compliance.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.